

ExternalAntenna

Antenna for LTE or radio communication

Key features	Communication channels 2G/3G/LTE Jeweller Wings Operating frequencies 698–960 MHz 1,710–2,690 MHz Connector SMA
Sabotage protection	External antenna breakage detection An Ajax system is able to detect a breakage of an external antenna and notify users and the monitoring company.
Installation	<ul style="list-style-type: none">• The antenna is connected to the hub's communication channels and goes outside through holes in the hub's casing.• The antenna is attached to the surface using a pre-applied double-sided adhesive tape.
Enclosure	Dimensions 115.6 × 21.7 × 5.8 mm 4.55" × 0.85" × 0.23" Cable length 3,000 mm 9.84" Weight 41 g 1.45 oz Operating temperature range from –40 °C to +85 °C from –40 °F to 185 °F Operating humidity up to 95%
Colors	Black
Complete set	ExternalAntenna Quick start guide
Warranty	24 months