

Quick Installation Guide

Wi-Fi Range Extender
A18/A18 Pro



Get Support
and Services



Scan the QR code or visit www.tendacn.com for installation videos, technical specifications, user guides and more information.

You can see the product name and model on the product label.
The label can be found on the back of the device.

A18 Pro is used for illustrations here unless otherwise specified. The actual product prevails.

- ④ Change the Wi-Fi name and Wi-Fi password of the extender
as required, and tap **Next**.

The extension is completed. Follow the onscreen instructions.

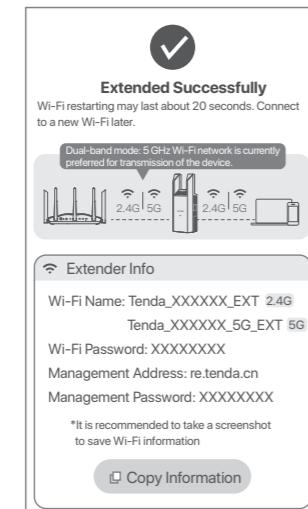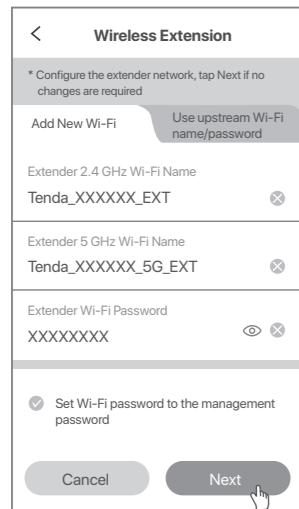


Method 2: Through Tenda WiFi App

- ① Download the Tenda WiFi App onto your mobile device by scanning the QR code or searching for **Tenda WiFi** in the **Google Play** or **App Store**.




- ② Connect the smartphone to the Wi-Fi network of the extender: **Tenda_EXT**.

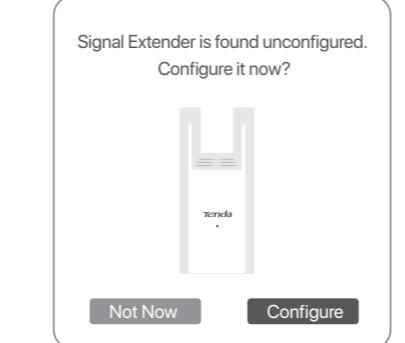

Method 3: Through WPS Button

- ① The App will automatically discover the extender, follow the onscreen instructions to set the extender. When the indicator of the extender turns solid on, the extension is successful.

- ② Press the WPS button of the router for about 1 to 3 seconds to enable its WPS function.
③ Within 2 minutes, press the **WPS** button on the extender for about 1 to 3 seconds, and its indicator blinks green fast.
When the indicator lights solid on, the setup is successful. The extender's Wi-Fi name is "Upstream router Wi-Fi name_EXT (or 5G_EXT)," and the Wi-Fi password is the same as the upstream router.

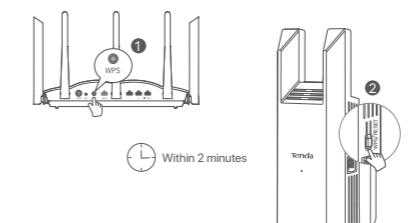

- ① Ensure that the Ethernet cable has been deployed in the place that needs Wi-Fi coverage and can access the internet normally. Connect the Ethernet cable to the Ethernet port of the extender, and plug the extender into the power socket. The indicator changes from blinks green to solid on to indicate successful extension.

- ② If the deployed Ethernet cable is for wiring in the wall, prepare the Ethernet cable by yourself.



- ③ Set the Wi-Fi name, Wi-Fi password and login password of the extender as required, and tap **Next**.

I Product Introduction


The extender supports both wireless and wired extension. If you have Ethernet cables deployed in your home, it is recommended to use the **AP Mode**. Otherwise, opt for the **Wireless Extension**. Choose the extension type as required, and refer to the following section for configuration.

	Wireless Extension	AP Mode
Extension Type	The extender connects to the upstream router through Wi-Fi and extends the router's Wi-Fi coverage range	The extender connects to the upstream router through an Ethernet cable and converts the router's wired network to Wi-Fi
Scenario	Rooms requiring Wi-Fi coverage without Ethernet cables deployed	Rooms requiring Wi-Fi coverage with Ethernet cables deployed
Features	1. It is recommended to select 5G Wi-Fi for extension, achieving better experience 2. After successful wireless extension, the dead zone will be covered by Wi-Fi, and the Ethernet port can be used to provide wired network access for other devices such as set-top boxes, computers, and TVs.	After successful wired extension, high-speed and stable Wi-Fi network access can be provided for various wireless such as smartphones, tablets, and smart devices.
Wireless Extension		

II Wireless Extension


Select the extender location

Place the extender in the middle between the router and the wireless dead zone (As far as possible to reduce the obstacle between the extender and the router, ensure that the smartphone is connected to the router's Wi-Fi and access the internet smoothly), then plug the extender into a power outlet, and the system will start up when the indicator blinks green.

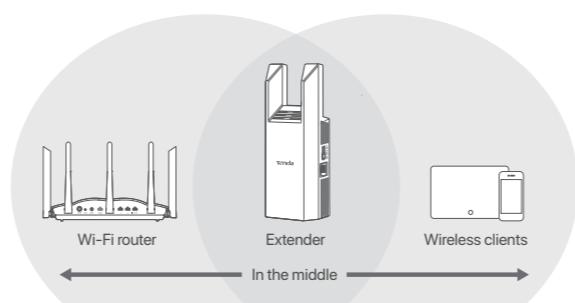


Set Up the Extender

- ① Connect the smartphone to the Wi-Fi network of the extender: **Tenda_EXT**. When the web UI of the extender is displayed automatically, tap **Start Now**.

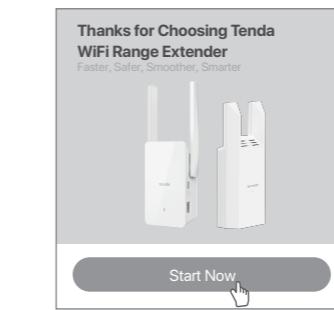


- 💡 Tips
 • If the above page does not appear, start a web browser, and access re.tenda.cn in the address bar to log in to the web UI. If you are configuring through the smartphone, disable your mobile data traffic and try to log in.
 • If your smartphone displays the prompt "Current Wi-Fi is not available, continue using this Wi-Fi?". Please continue using this Wi-Fi.

- ② Select the Wi-Fi you want to extend.

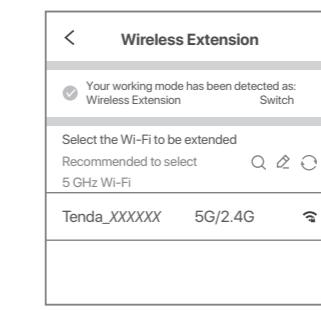

- ③ Enter the Wi-Fi password of the router, and tap **Next**.

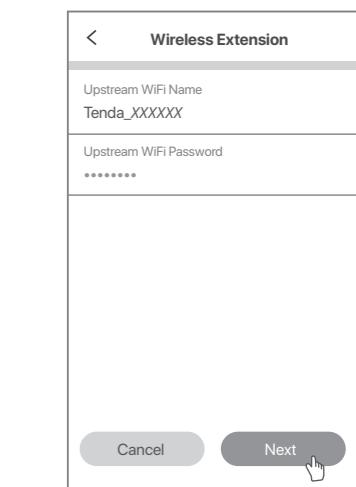


III AP Mode

- ① Ensure that the Ethernet cable has been deployed in the place that needs Wi-Fi coverage and can access the internet normally. Connect the Ethernet cable to the Ethernet port of the extender, and plug the extender into the power socket. The indicator changes from blinks green to solid on to indicate successful extension.

- ② If the smartphone does not automatically redirect to the extender's web UI, start a web browser, and access re.tenda.cn in the address bar to log in to the web UI. If you are configuring through the smartphone, disable your mobile data traffic and try to log in.

- 💡 Tips
 • If your smartphone displays the prompt "Current Wi-Fi is not available, continue using this Wi-Fi?". Please continue using this Wi-Fi.


- ③ Set the Wi-Fi name, Wi-Fi password and login password of the extender as required, and tap **Next**.

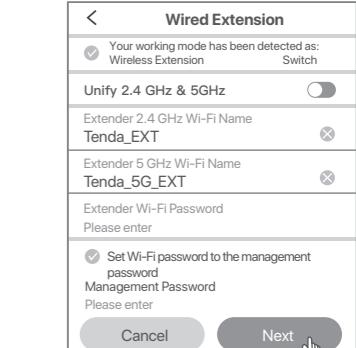


- ④ Connect the smartphone to the Wi-Fi network of the extender: **Tenda_EXT**. When the web UI of the extender is displayed automatically, tap **Start Now**.

IV Extender installation recommendations

Large flat floor network coverage

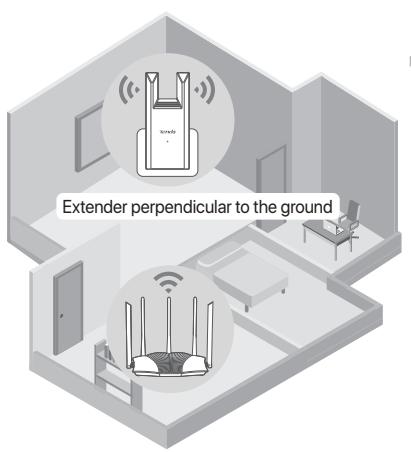


Cross-floor network coverage

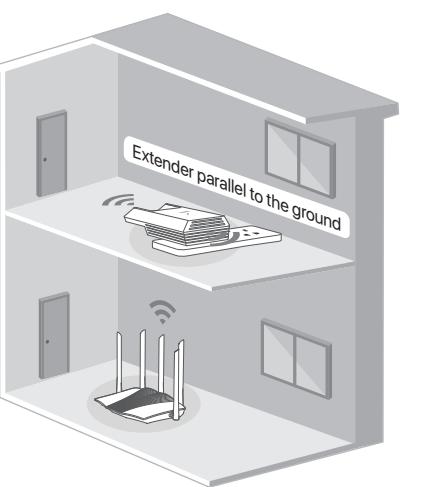


Wi-Fi Name: Wi-Fi name you set, Tenda_EXT (Or 5G_EXT), router's Wi-Fi name_EXT (or 5G_EXT), or the same as the router

Wi-Fi Password: Wi-Fi password you set or same as the router

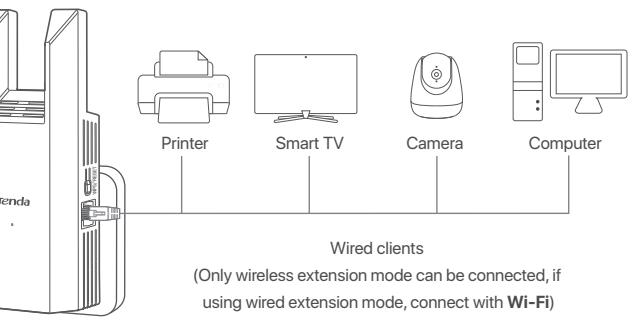

V Connect Clients to the Internet

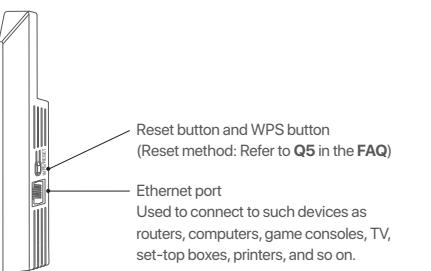

Scenario	Status	Description
Network extension	Solid on	Extension success – Green: Proper position. – Yellow: Fair position. Move the extender closer to the router. – Red: Too far from the router.
	Blinking green fast	WPS extension
	Blinking red slowly	Failed to extend (Check whether the Wi-Fi name/password of the upstream router is correct or place the extender close to the router)
Start up	Solid green for 15 seconds	Power on and starting up
	Blinking green slowly	Startup complete
Internet connection	Blinking yellow slowly	Failed to connect to the internet (Check whether the upstream router can access the internet normally)
Reset	Blinking yellow fast	Restoring the extender to factory settings

Appearance

Product	NOMBRE DEL PRODUCTO: Repetidor WiFi de banda dupla MODELO: A18 Pro/A18	NOM
Alimentador de Energía: Alimentación: 100V - 240V ca 50Hz/60Hz, 0.4A Salida: 12V cc 1A		

Safety Precautions

Before operating, read the operation instructions and precautions to be taken, and follow them to prevent accidents. The warning and danger items in other documents do not cover all the safety precautions that must be followed. They are only supplementary information, the installation and maintenance personnel need to understand the basic safety precautions to be taken.

- Do not use the device in a place where wireless devices are not allowed.
- Clean only with dry cloth.
- Do not block any ventilation openings, such as newspapers, table-cloth, curtains.
- To avoid electrical shocks, do not insert any object into the ventilation openings.
- Unplug this device during lightning storms or when unused for long periods of time.
- The mains plug is used as the disconnect device, which shall remain readily operable.
- The power socket shall be installed near the device and easily accessible.
- Operating environment: Temperature: 0°C - 40°C (32°F - 104°F); Humidity: (10% - 90%) RH, non-condensing; Storage environment: Temperature: -40°C - 70°C (-40°F - 158°F); Humidity: (5% - 90%) RH, non-condensing.
- If such phenomena as smoke, abnormal sound or smell appear when you use the device, immediately stop using it and disconnect its power supply, and contact the after-sales service personnel.
- Warning: To reduce the risk of electric shock, do not remove cover as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- Refer all servicing to qualified service personnel.
- Disconnect the power source during servicing.
- Keep this device out of reach of children to prevent children from using it as a toy and causing personal injury.
- Keep the device away from water, fire, high electric field, high magnetic field, and inflammable and explosive items.

For the latest safety precautions, see **Safety and Regulatory Information** on www.tendacn.com.

CE CE Mark Warning

English

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. This equipment should be installed and operated with a minimum distance 20cm between the device and your body. NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Declaration of Conformity

Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the device (Extender) is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: <https://www.tendacn.com/download/list-9.html>

Operating Frequency/Max Output Power

English: Operating Frequency/Max Output Power	Slovenčina: Prevádzková frekvencia/maximálny výstupný výkon
Italiano: Frequenza operativa/Potenza di uscita massima	Ελληνικά: Σύχνωτα λειτουργίας/Μέγιστη ισχύς Εξόδου
Français: Fréquence de fonctionnement/Puissance de sortie maximale	Magyar: Működési frekvencia/Maximális kimeneti teljesítmény
Español: Frecuencia operativa/Potencia de salida máxima	Български: Работна честота/Максимална изходна мощност
Deutsch: Betriebsfrequenz/Max. Ausgangsleistung	Eesti: Toösaagedus/Max väljundõltsus
Polski: Częstotliwość pracy/Maksymalna moc wyjściowa	Dansk: Driftsfrekvens/Maks. Udgangsfejls
Nederlands: Bedrijfsfrequentie/Maximal uitgangsvermogen	Suomi: Toimintataajuus/maksimilähtötohe
Croatian: Provozni frekvencija/maximalni výstupní výkon	Latviešu: Operējošās frekvenčes/Maksimāla izlašna snaga
Romană: Frevență de funcționare/Potere maximă de ieșire	Slovenščina: Delovna frekvencia/Največja izhodna moč
Português: Frequência de Funcionamento/Potência Máxima de Saída	Türkçe: Çalışma Frekansı/Maks. Çıkış Gücü
Rусский: Рабочая частота/макс. выходная мощность	Русский: Рабочая частота/макс. выходная мощность
Arabic: التردد التشغيلي / المقدار الأقصى للإخراج	

2412MHz-2472MHz/20dBm
5150MHz-5250MHz(indoor use only)/23dBm

Restrictions in the 5 GHz Band

AT	BE	BG	CH	CY	CZ	DE	DK	EE	EL	ES	FI	FR	HR	HU	IE
IS	IT	LU	LT	LV	MT	NL	NO	PL	PT	RO	SE	SI	SK	UK(NI)	UK

AT	BE	BG	CH	CY	CZ	DE	DK	EE	EL	ES	FI	FR	HR	HU	IE
IS	IT	LU	LT	LV	MT	NL	NO	PL	PT	RO	SE	SI	SK	UK(NI)	UK

FAQ

Q1. I cannot log in to the web UI of the extender. What should I do?

A1. First, try the following solutions:

- Visit <http://re.tenda.cn> in your browser.
- If you are using a wireless client, such as a smartphone, ensure that the **Mobile Data** (if any) function is disabled.

If the problem persists, try the following solutions:

Before extension:

- If you are using a wireless client, such as a smartphone, ensure that your smartphone has connected to the Wi-Fi network of the extender: **Tenda_EXT**.

- If you are using a wired device, such as a computer, ensure that your computer is set to **Obtain an IP address automatically** and **Obtain DNS server address automatically**.

- Reset the extender by referring to Q5 in the FAQ, and log in again.

After extension:

- If you are using a wireless client, such as a smartphone, ensure that your smartphone has connected to the Wi-Fi network of the extender.

- If the Wi-Fi name of the extender is the same as the upstream router, stand nearby the extender and connect to its Wi-Fi network (the extender should not be too close to the router, or temporarily power off the router).

- If you are using a wired device, such as a computer, ensure that your computer is set to **Obtain an IP address automatically** and **Obtain DNS server address automatically**.

Q2. My extender cannot find the Wi-Fi network of my router. What should I do?

A2. Try the following solutions:

- Ensure that your smartphone is near the extender and can search and connect to the Wi-Fi network of the router.

- Change the channel of your router, and try again.

- Change the encryption type of the router to **WPA-PSK** or **WPA2-PSK**, and try again.

Q3. I cannot find the Wi-Fi name of the extender after extending network successfully (the indicator is solid on). What should I do?

A3. The possible reason is that you did not customize the extender Wi-Fi name when extending the network. In this case, the Wi-Fi name of the extender is the same as the upstream router or **_EXT** (or **5G_EXT**) of the upstream router Wi-Fi name after the extension is successful.

Q4. After the wireless extension is successful (the indicator is solid on), the network speed through the extender is slower than when directly connected to the router. What should I do?

A4. The network speed may decrease during wireless extension due to upstream signal attenuation, but this is a normal phenomenon that does not affect normal use. To maximize the extension effect, ensure that the extender indicator is solid green, and reduce the obstacles between the extender and the router. If an Ethernet cable has been deployed at home, a wired extension is recommended.

Q5. How to reset the extender?

A5. When the extender completes startup, press the **RESET** button for about 8 seconds. When the indicator blinks yellow fast, the extender is restored to factory settings.

FCC FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Deutsch-Achtung: In den EU-Mitgliedsstaaten, den EFTA-Ländern, Nordirland und Großbritannien ist der Betrieb im Frequenzbereich 5150 MHz - 5250 MHz nur in Innenräumen erlaubt.

Italiano-Attenzione: Negli Stati membri dell'UE, nei Paesi EFTA, nell'area del Nord e nel Gran Bretagna, il funzionamento nella gamma di frequenze 5150 MHz - 5250 MHz è consentito solo in ambienti chiusi.

Español-Atención: En los estados miembros de la UE, los países de la AELC, Irlanda del Norte y Gran Bretaña, el rango de frecuencia operativa de 5150 MHz - 5250 MHz sólo está permitido en interiores.

Português-Atenção: Nos estados membros da UE, países da EFTA, Irlanda do Norte e Grã-Bretanha, o funcionamento na gama de frequências 5150 MHz - 5250 MHz só é permitido no interior.

Francés-Attention: Dans les Etats membres de l'UE, les pays de l'AEE, Irlande du Nord et la Grande-Bretagne, l'utilisation dans la gamme de fréquences 5150 MHz - 5250 MHz n'est autorisée qu'en intérieur.

Nederlands-Aandacht: In de EU-lidstaten, de EVA-landen, Noord-Ierland en Groot-Brittannië is gebruik in het 5150 MHz - 5250 MHz frequentiebereik alleen binnewonen toegestaan.

Svenska-Uppmärksamhet: EFTAs medlemsländer, EFTA-länderna, Nordirland och Storbritannien är det endast tillåtet att använda frekvensområdet 5150 MHz - 5250 MHz inomhus.

Danish-Bemærk: I EU-landene, EFTA-landene, Nordirland og Storbritannien er drift i frekvensområdet 5150 MHz - 5250 MHz kun tilladt i binnenværelse.

Scandinavian-Huomio: Eu-maissa EFTA-maissa sekä Irlannissa ja Pohjois-Englannissa takaajutellaan 5150 MHz - 5250 MHz on salitettu käytäntöä ainoastaan sisätiloissa.

Magyar-Régióban: Az EU-tagállamokban, az EFTA-országokban, Észak- és Dél-Skandináviában, Nagy-Britanniában ja Írországban 5150 MHz - 5250 MHz esti permisus numai az interior.

Polski-Uwaga: W państwach członkowskich UE, krajach europejskiej Stowarzyszenia Współpracy Handlu (EFTA), Irlandii Północnej i Wielkiej Brytanii prac w zakresie częstotliwości 5150 MHz - 5250 MHz jest dozwolona tylko w pomieszczeniach.

Croatia-Pozor: V členskih državah EU, Marce Bitaniji, operira u intervalu 5150 MHz - 5250 MHz, a u restiranju je provoz u frekvenčnom rasponu 5150 MHz - 5250 MHz potpuno dozvoljen.

Eesti-Tähelepanu: EL-o liikmesriikides, EFTA riikides, Põhja-Euroopas ja Suurbritannias on sagelusvahemikus 5150 MHz - 5250 MHz kasutamine lubatud ainult sisseruumides.

Slovenčina-Pozor: V državách členiacich EU, v krajach EFTA, Severnom Česku a Slovensku je dozvolen v frekvenčnom obmedzení 5150 MHz - 5250 MHz použiť len v priestore.

Hrvatski-Pozor: U svim članicama EU, u državama EFTA, Sjevernoj Irskoj i Velikoj Britaniji, rad u frekvenčnom rasponu od 5150 MHz - 5250 MHz dozvoljen je samo u zatvorenom prostoru.

Lietuvos-Uzmanibūtis: ES valstybės, EFTA valstybės, Ziemeļkalnu ir Liettuvos, operėšana iekštelpis ar ištauta tikai 5150 MHz - 5250 MHz drapazinė.

Lietuvos-Dėmesys: ES valstybės, EFTA valstybės, Ziemeļkalnu ir Liettuvos, operėšana iekštelpis ar ištauta tikai 5150 MHz - 5250 MHz drapazinė.

Norsk-OBS: I EU-medlemsland, EFTA-land, Nord-Irland og Storbritannia er drift i frekvensområdet 5150 MHz - 5250 MHz kun tillatt innendørs.

Iceland-Athugið: Í aldaðarum ESB, EFTA-Íslandum, Norður-Írlandi og Bretlandi er rekstur á tönnivöldum 5150 MHz - 5250 MHz aðeins leyfður innanhyrda.

Copyright © 2024 Shenzhen Tenda Technology Co., Ltd. All rights reserved.

Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.

V1.0 Keep for future reference

