
 
# IRIS/SIMPO Repeater Panel, Model: TFT **Quick Installation Manual**

# TELETEK Address: 2 Iliyansko shose Str,

Teletek Electronics JSC 1220 Sofia, Bulgaria

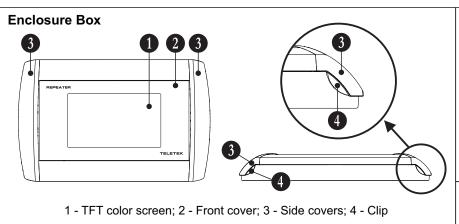

# **Opening**



- 1 Press the clip;
- 2 Pull up the side covers

## Closing



- 1 Mount the top of the side cover to the box bottom; 2 - Press down the side
- cover until a click is heard. Note: Observe the position of the side covers on the back -1 is the left covers and 2 is the right cover.

#### ATTENTION!

Operation with Repeater Panel, model TFT, is supported for the following revisions:

#### **IRIS Fire Alarm Panel**

LCD PCB Hardware revision: 2.4 and higher MAIN Board Firmware revision: 4.2 and higher

#### **SIMPO Fire Alarm Panel**

MAIN Board Firmware revision: 2.8 and higher


### iRIS4 Fire Alarm Panel

MAIN Board Firmware revision: 1.0 and higher

#### iRIS8 Fire Alarm Panel

MAIN Board Firmware revision: 1.0 and higher

### Removing the front cover

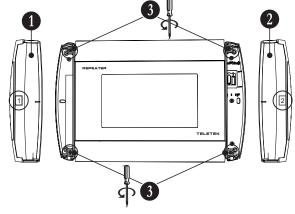

- 1 Left side cover. Mark "1" on the back.2 Right side cover. Mark "2" on the back.
- 3 Undo the screws to remove the front cover. Note: Be careful not to damage the TFT screen!

18021097, RevD, 07/2024


# IRIS/SIMPO Repeater Panel, Model: TFT **Quick Installation Manual**


1293 DoP No: 138

# TELETEK

Teletek Electronics JSC Address: 2 Iliyansko shose Str, 1220 Sofia, Bulgaria

## **Enclosure Box**

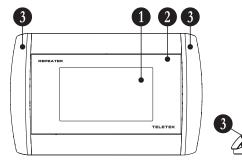

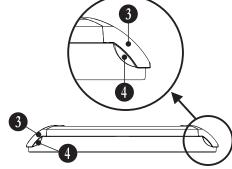

1 - TFT color screen; 2 - Front cover; 3 - Side covers; 4 - Clip

#### **Opening**



- 1 Press the clip;
- 2 Pull up the side covers

# Closing



- 1 Mount the top of the side cover to the box bottom;
- 2 Press down the side cover until a click is heard. Note: Observe the position of the side covers on the back -1 is the left covers and 2 is the right cover.

### ATTENTION!

Operation with Repeater Panel, model TFT, is supported for the following revisions:

### **IRIS Fire Alarm Panel**

LCD PCB Hardware revision: 2.4 and higher MAIN Board Firmware revision: 4.2 and higher

### SIMPO Fire Alarm Panel

MAIN Board Firmware revision: 2.8 and higher


#### iRIS4 Fire Alarm Panel

MAIN Board Firmware revision: 1.0 and higher

## iRIS8 Fire Alarm Panel

MAIN Board Firmware revision: 1.0 and higher

### Removing the front cover

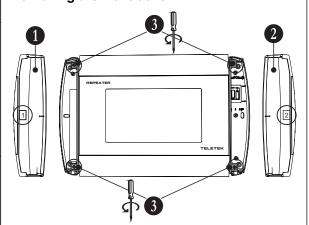

- 1 Left side cover. Mark "1" on the back.2 Right side cover. Mark "2" on the back.
- 3 Undo the screws to remove the front cover. Note: Be careful not to damage the TFT screen!

